

Setting a USB time hasp to upload to the ElitePi TFT screens using the
C.E. Electronics USB installer software.

1. Open "Edit" "HASP" in the drop down menus.
2. The first time you start press OK and enter the two password codes provided in the hasp code boxes
3. Insert the USB time hasp into your computer USB port and wait for the RED light to come on
4. Press the FIND button in the time hasp window
5. To set the time to your computer system time press SET
OR
6. To set the time to another time uncheck the "set time" box, enter the time and date and press SET
7. Press the OK button.
8. The USB time HASP is now ready for use.

Note: If the TFT design is set to automatically adjust to daylight saving time the time should always be set at Winter Time.

J Trett 7 December 2010 rev 1

C.E. Electronics Ltd.,
P.O. Box 1679, Marlow, Bucks, SL7 3ZG

Telephone: 01628 487633
Fax: 020 7855 0819
Web: <http://www.cееlectronics.co.uk/>