

C.E. Electronics Ltd. P.O.Box 1679, Marlow, Bucks SL7 3ZG, UK
 Tel +44 (0) 1628 487633 Fax +44 (0) 20 7785 0819 Web www.ceelectronics.co.uk

Quick set-up guide for keypad installations **LED status** **Message status**

Install the control hardware (on the top of the car) and the keypad		
Connect the relay contacts in series with the car buttons		
Connect the mains supply to the control hardware	Amber	Enter Code
Enter 1# and relay 1 will energise	Green (timed)	Access Granted
Check the relay led goes out and the associated button works	Green (timed)	Access Granted
Repeat for other relays e.g. Enter 2# to energise relay 2	Green (timed)	Access Granted

When happy with the installation delete the pre-installed keypad codes	Amber	Enter Code
Enter ??# (master access code - see documents with product for number)	Blink Green	Choose Function
Enter 5# (function delete all codes)	Blink Amber/Red	Clear Users
Enter 000005#	Blink Green	Enter Again
Enter 000005# again	Blink Amber	User Cleared
Enter *	Amber	Enter Code

Add new access codes	Amber	Enter Code
Enter ??# (master access code - see documents with product for number)	Blink Green	Choose Function
Enter 1# (function add new code)	Green	Add User
Enter new code# e.g. 3456# (6 digits or less)	Blink Green	Enter Again
Enter new code# again	Amber	User Accepted
Enter relay number# required e.g. 1# for relay 1 (must do this for at least 1 relay)	Blink Green	Enter Again
Enter relay number# again	Amber	Floor Accepted
Repeat enter relay number# for other relays e.g. 2# for relay 2	Blink Green	Enter Again
Enter relay number# again	Amber	Floor Accepted
Enter 0# (to save changes)	Blink Green	Enter Again
Enter 0# again	Blink Amber	User Added
Enter *	Amber	Enter Code
Repeat above for additional access codes and relay combinations	as above	
To test code - enter new code#	Green (timed)	Access Granted

Delete individual access code if to be changed or not required	Amber	Enter Code
Enter ??# (master access code - see documents with product for number)	Blink Green	Choose Function
Enter 2# (function delete code)	Red	Delete User
Enter code# to delete e.g. 2346#	Blink Green	Enter Again
Re-enter code# to delete	Blink Amber	User Deleted
Enter *	Amber	Enter Code
To test code - enter deleted code#	Red	Access Denied

Other Functions (refer to manual)
Change Master Access Code (Function 3)
Verify User & Floor Access (Function 4)
Edit Timing etc (Function 6)
Add Floor Manager Control (Function 7)
Transfer Data to/from Hand Held Programmer